

SPARKULAR**BT01/BT02****a) Main Interface :**

Option	DEFAULT
Set DMX Address	1
Fountain Height	5
Manual Heat	OFF
Manual Fountain	OFF
Auto Clear Delay	0.4S

a) Advanced Interface :

Option	Illustration
Set Temperature	580
LCD Backlight	ON
Density@ Height 1	50
Density@ Height 2	50
Density@ Height 3	60
Density@ Height 4	60
Density@ Height 5	70
Density@ Height 6	70
Density@ Height 7	80
Density@ Height 8	90
Density@ Height 9	100
Density@ Height 10	100
Mode Selection	User Mode
Default Parameter	NOT USE
Motor Protect	OFF
Power Selection	BT01/220V,BT02/110V
DMX Channel Mode	2 DMX Channel
Tip Over Error	OFF
Standby Switch	OFF

a)Factory Interface :**SPARKULAR mini****BT06/BT07****a) Main Interface :**

Option	DEFAULT
Set DMX Address	1
Wireless Remote	ON
Manual Fountain	OFF

a) Advanced Interface :

Option	Illustration
Set Temperature	550
Auto Heat	ON
Density	90
Mode Selection	User Mode
DMX Channel Mode	2 DMX Channel
Tip Over Error	ON
Default Parameter	NOT USE
Standby Switch	OFF

a)Factory Interface :

Option	DEFAULT
TEMP. Offset	0
Density Offset	70
Protect TEMP.	680

Option	DEFAULT
TEMP. Offset	0
Density Offset	70
Protect TEMP.	680

a) Main Interface :

Option	DEFAULT
Set DMX Address	1
Wireless Remote	OFF
Manual Fountain	OFF
Fountain Height	1

a) Advanced Interface :

Option	Illustration
Set Temperature	550
Auto Heat	OFF
Density	90
Mode Selection	User Mode
DMX Channel Mode	2 DMX Channel
Tip Over Error	NOT USE
Default Parameter	NOT USE
Standby Switch	OFF

a)Factory Interface :

Option	DEFAULT
TEMP. Offset	0
Density Offset	80
Protect TEMP.	750