

REMOTE MICROPHONE STATION

MODEL : IPA-Paging Microphone



FRONT Panel



- **INDICATORS**
Power(Blue), Signal(Green), Clip(Red), Busy(Red)
- **MIC INPUT**
XLR input jack to connect a condenser MIC.
- **ZONE ALL**
Select and release all zones. Press and hold for locking the all zones.
- **INDIVIDUAL ZONE**
Select and release each zone 1~6.
Press and hold for locking the selected zone.
- **PRE-ANNOUNCE CHIME**
Turn on and off the pre-announcement chime.
- **TALK**
Press and hold to start broadcasting after selecting the each zones.
Releasing the button to end broadcasting.

REAR Panel



- **LINK**
Terminal to connect to main amplifier with UTP CAT5.
We would like to remmand up to 200m total distance to amplifier.
MIC stations can be connected up to 4unit through LINK port
- **CHIME VOLUME**
Adjust pre-announcement chime level.
- **OUTPUT VOLUME**
Adjust MIC input level.

Specifications

Performance	
Audio Output	0dB(Balanced)
Audio Input	- 36dB ± 3dB(Balanced)
Frequency Response	- 1dB (80Hz~15kHz)
Signal to Noise Ratio	Better than 90dB
T.H.D.	Less than 0.05%
Serial Interface	RS485 Maximum 200m (UTP CAT5)
Operation Temperature	0°C ~ +40°C
Construction	
Net Weight	0.5 kg
Dimensions (W/H/D)	200 X 60 X 120 mm